

CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

LEISUREMOD
YOUR OWN CLASSIC™



LeisureMod

Phone: (201) 429-7715

Email: Info@LeisureMod.com

 


CBF68BL CB40


ASSEMBLY INSTRUCTIONS & DIMESNION




Read through the instructions carefully before you begin.

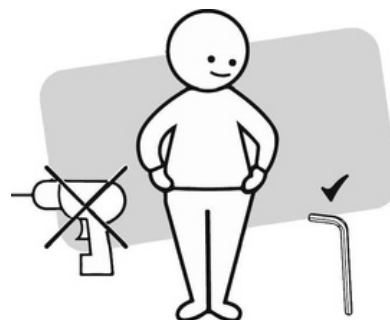

 Make sure you have all the required tools. Never use power tools unless instructed.

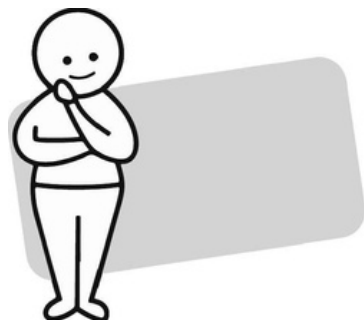

 Identify and lay out all of the components before assembling.

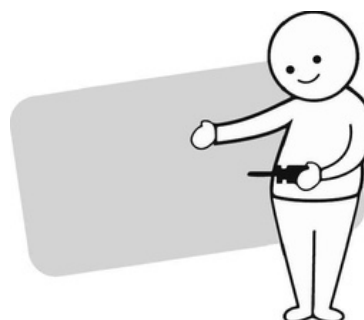

Unless instructed, do not fully tighten screws until the item is fully assembly.



Retain these instructions for future reference.



Do not discard any of the packaging until you have checked that you have all the parts and the pack of fixings.

LeisureMod

Phone: (201) 429-7715

Email: Info@LeisureMod.com



CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION



WARNING! TO REDUCE THE RISK OF SERIOUS INJURY, READ THE FOLLOWING SAFETY INSTRUCTIONS BEFORE ASSEMBLING AND USING THE PRODUCT.

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

Any assembly or maintenance of the product must be carried out by adults only.

Some parts may contain sharp edges. Wear protective gloves if necessary.

To prevent damage, place all parts on a level surface during assembly. Add a layer of protective surface if needed.

Due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched. This is a natural process. To minimize this condition, it is recommended that care be taken when assembling and handling the product in order to prevent the paint from being scratched.

TOOLS REQUIRED



2 person

NOTE:

To avoid damage, ensure screws are hand tightened.

DO NOT USE POWER TOOLS TO ASSEMBLE YOUR UNIT.

NOTE:

Philips head screw driver is required in the assembly process. However, manufacturer does not provide this item. Quantities shown are for one chair.

LeisureMod

Phone: (201) 429-7715

Email: Info@LeisureMod.com



CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

ASSEMBLY INSTRUCTIONS

 
ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the seller immediately.
2. This product is for home use only and not intended for commercial establishments.

PARTS CHECKLIST

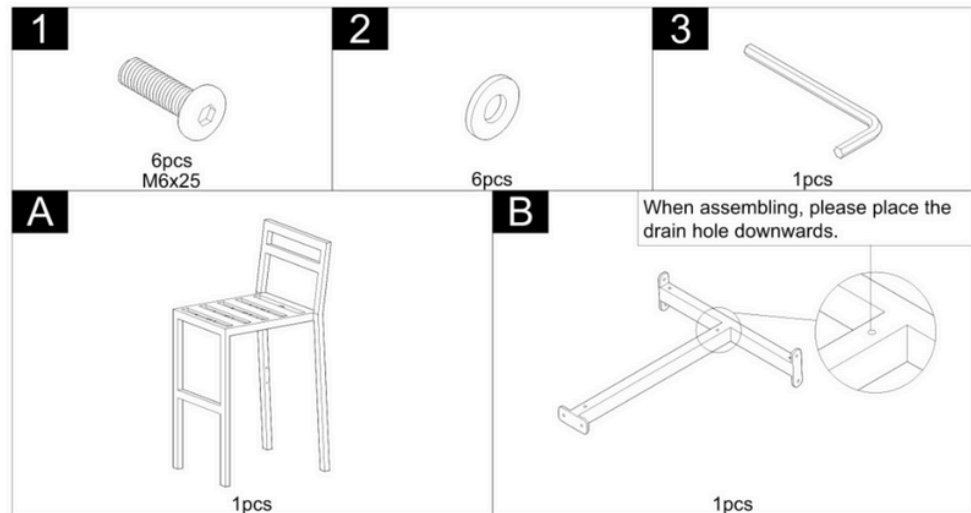

LeisureMod

Phone: (201) 429-7715

 
Email: Info@LeisureMod.com



CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMESNIION

LEISUREMOD
YOUR OWN CLASSIC™

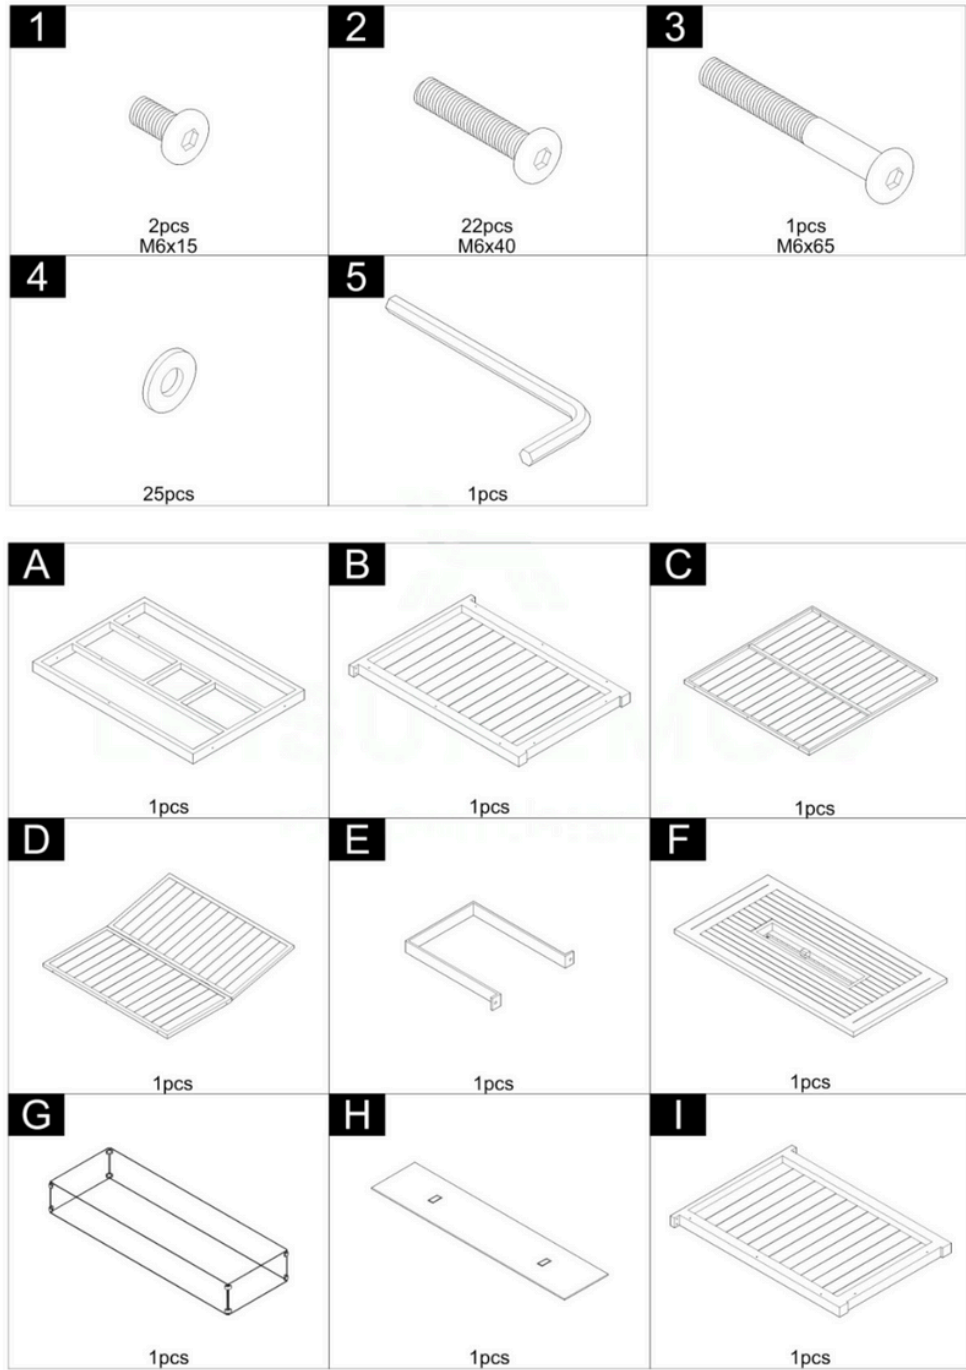

LeisureMod

Phone: (201) 429-7715

 
Email: Info@LeisureMod.com




CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

STEP 1

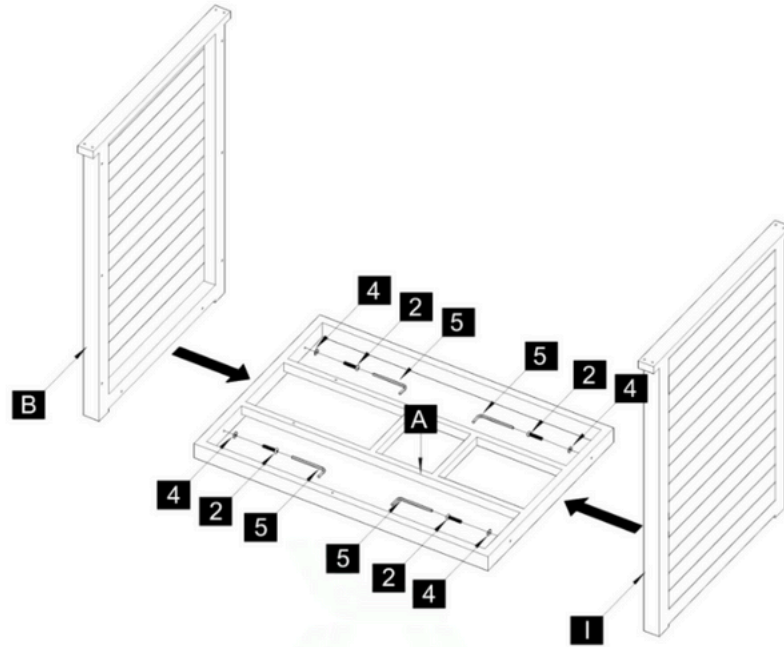

 STEP 2

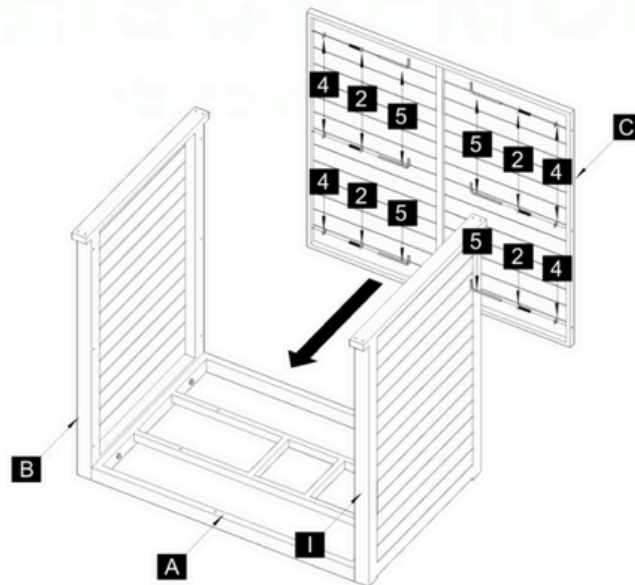

LeisureMod

Phone: (201) 429-7715

 
Email: Info@LeisureMod.com




CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

STEP 3

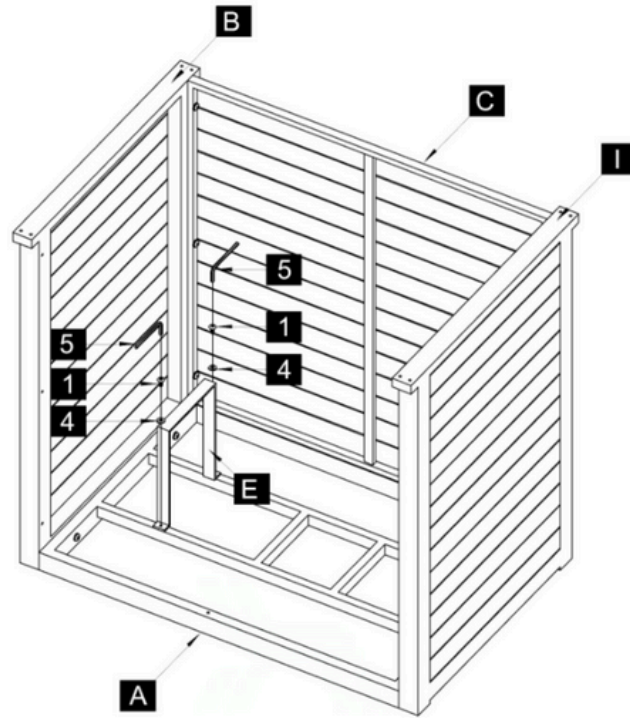

 STEP 4

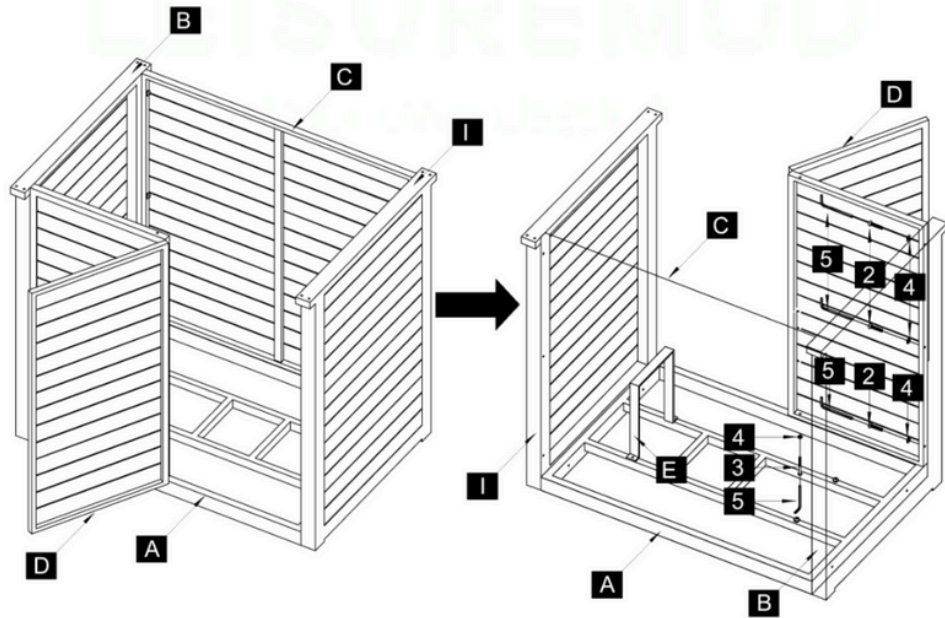

LeisureMod

Phone: (201) 429-7715

 
Email: Info@LeisureMod.com




CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

STEP 5

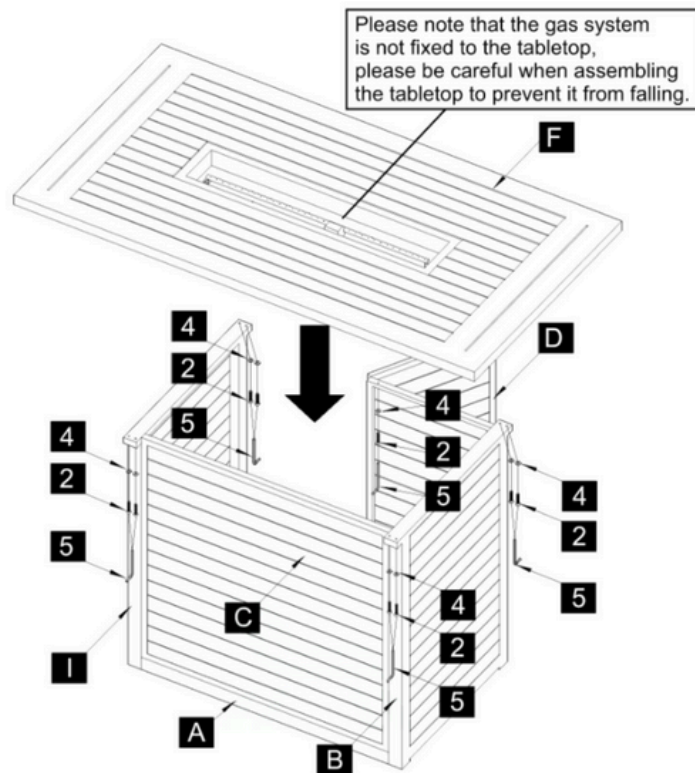

 
STEP 6

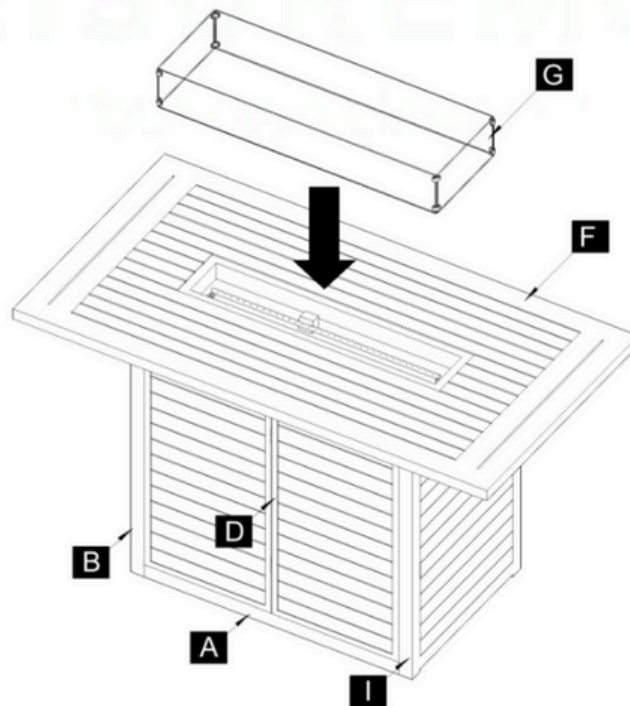


CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

 STEP 7

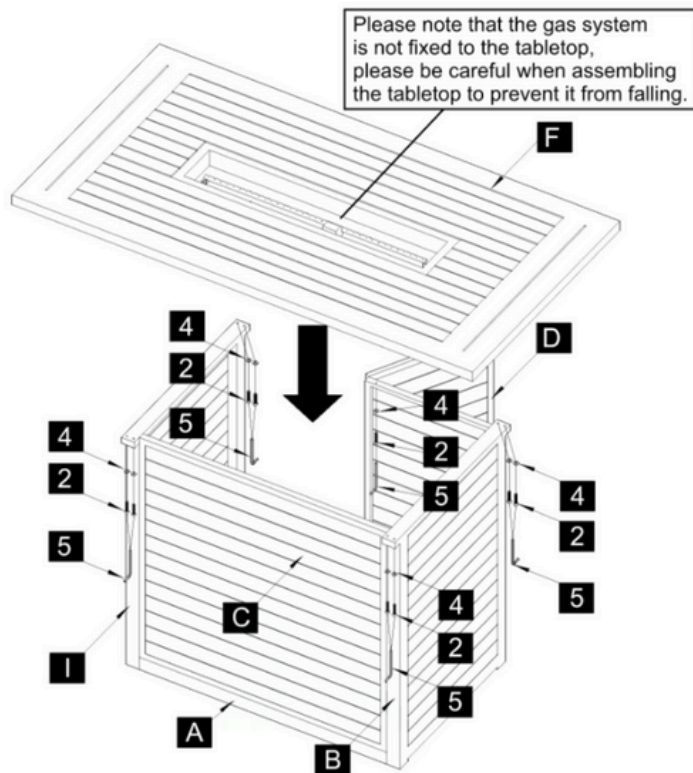

 
STEP 8

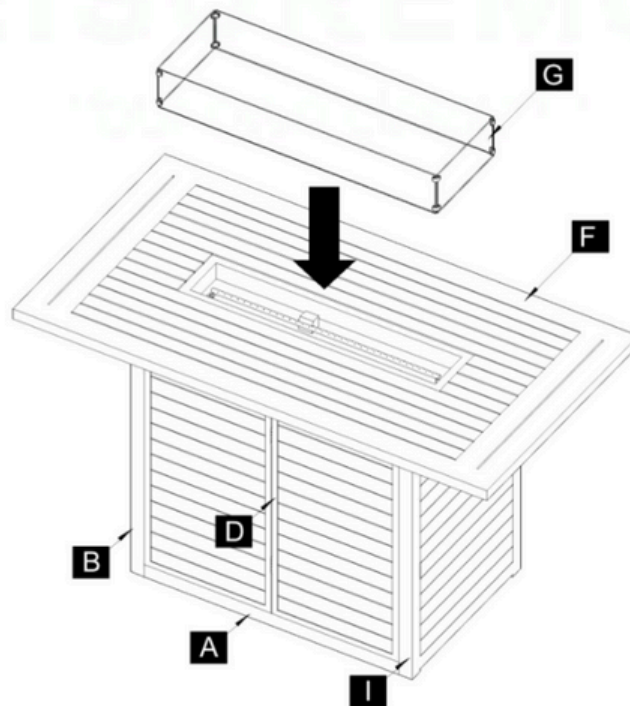

CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

 STEP 9

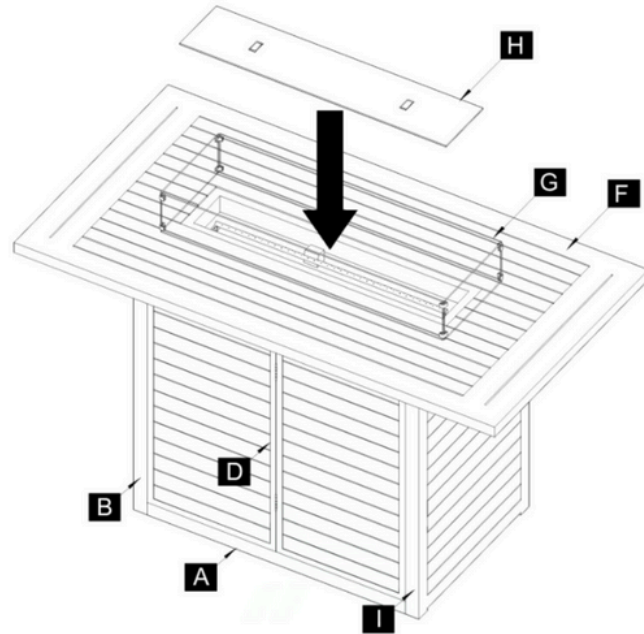

STEP 10



LeisureMod

Phone: (201) 429-7715

 
Email: Info@LeisureMod.com



CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

STEP 1

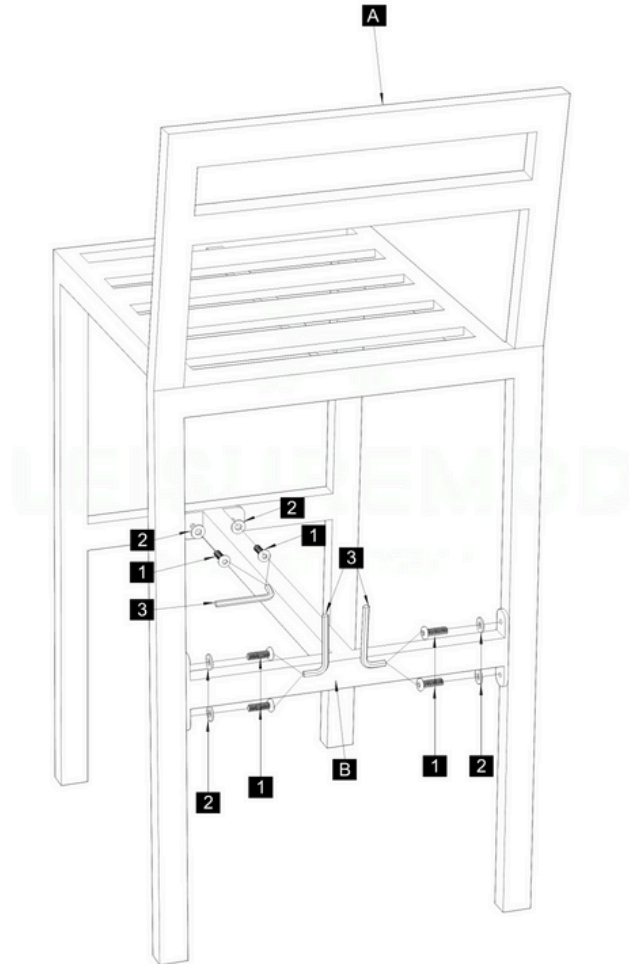

LeisureMod

Phone: (201) 429-7715

Email: Info@LeisureMod.com





CBF68BL CB40

ASSEMBLY INSTRUCTIONS & DIMENSION

LEISUREMOD
YOUR OWN CLASSIC™

FIRE PIT TABLE	
Overall Item height	48 in (Includes wind glass, glass height 6.2in)
Overall Item width	68.8 in
Overall Item length	36 in
BAR STOOLS	
Overall Item height	40.4 in
Overall Item depth	20.5 in
Overall Item width	18.3 in
Seat Height - Floor to Seat	31.5 in(Includes cushion, cushion height 2 in)
Seat Width - Side to Side	15.4 in
Seat Depth - Front to Back	17.4 in
Chair Back Height - Seat to Top of Back	8.9 in

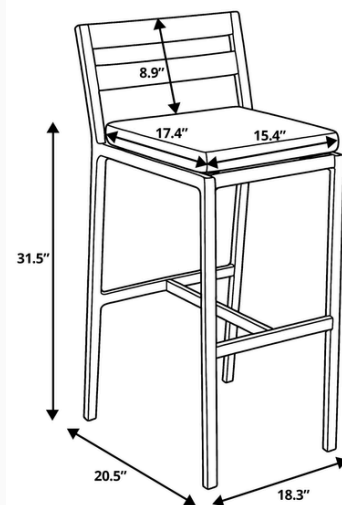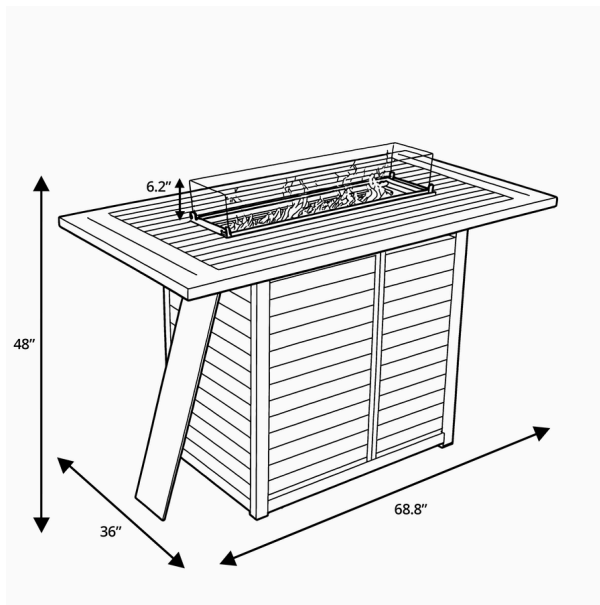  

LeisureMod

Phone: (201) 429-7715

Email: Info@LeisureMod.com



Its Ready !!!

ASSEMBLY INSTRUCTIONS & DIMENSION

DINING TABLE	
Overall Height - Top to Bottom	30 in.
Overall Width - Side to Side	47 in.
Overall Depth - Front to Back	47 in.
Leg Height	28.5 in.
Top Thickness	1.38 in.

DINING CHAIRS	
Overall Height - Top to Bottom	33 in.
Overall Width - Side to Side	25.2 in.
Overall Depth - Front to Back	24.5 in.
Seat Height - Floor to Seat	19 in.
Seat Width - Side to Side	24.4 in.
Seat Depth - Front to Back	17.5 in.
Back Height - Seat to Top of Back	16.5 in.
Arm Height - Floor to Arm	26 in.
Arm Width - Side to Side	2 in.

LeisureMod

Phone: (201) 429-7715

Email: Info@LeisureMod.com

